

MEG 130

1-4 MEGABYTE
RAM CARD
FOR ATARI
130 XE
COMPUTERS
INCLUDES
UTILITIES
SOFTWARE

(RAM NOT INCLUDED)

(C) 1991 NEWELL INDUSTRIES

MEG 130

1-4 MEGABYTE
RAM CARD
FOR ATARI
130 XE
COMPUTERS
INCLUDES
UTILITIES
SOFTWARE

(RAM NOT INCLUDED)

(C) 1991 NEWELL INDUSTRIES

MEG130 INSTALLATION (Rev.C)

CAUTION: This product should only be installed by persons with proper training in the art of soldering. Newell Industries will not be held responsible for damage to the computer due to neglect or carelessness. Read these instructions completely before beginning.

The MEG130 upgrade can be installed using different combinations of bits of the \$D301 address port of the 6520 PIA. The 130XE uses bit 4 (low) to enable Main cpu banking, and bit 5 to enable Antic (screen pro.) banking. It uses bits 2 & 3 to determine which of the four 16K banks is active. The 130XE uses 2 sets of ram banks and flip flops the CAS line to activate the banked memory. Unfortunately bits 0,1,& 7 are also used. See below.

\$D301 PIA PORT B BIT ASSIGNMENTS (UNMODIFIED 130XE)

BIT 0-O.S. ROM CONTROL, 1=ROM, 0=RAM	BIT 1-BASIC ROM CONTROL, 1=RAM, 0=ROM
BIT 2-RAM BANK SELECT, 1=RAM, 0=RAM	BIT 3-RAM BANK SELECT, 1=RAM, 0=RAM
BIT 4-CPU BANK ENABLE, 1=NOT ENABLED, 0=ENABLED	
BIT 5-ANTIC BANK ENABLE, 1=NOT ENABLED, 0=ENABLED	
BIT 6-NOT USED	BIT 7-DIA.ROM CONTROL, 1=RAM, 0=ROM

GENERAL INSTALLATION

The ribbon cable wires 1(red)-8=D0-D7, 9=AB6, 10=AB5, 11=AB0, 12=AB1, 13=AB4(4 meg), 14=REF, 15=PB4, 16=MAP.

1.Read the 'README' file on the disk. Disassemble computer and remove the motherboard.

2.Remove the ram chip from U26. Remove ram chips U27-U33 or cut pins 7 & 16 to each. Install H1 cable in U26. Make sure that pin 1 matches up. Solder or socket. If you use a socket, you may have trouble putting the shields back on. Fold the cable and place the meg board so that the component side is up.

3.On the PIA, remove pins 11 and 17 (PB1 & PB7) from the motherboard and bend them out. Be careful not to damage the motherboard or break the pins off at the IC.

4.Make the following ribbon cable wire connections:

Wire to Location	Wire to Location
1 - Basic IC pin 9 or Antic pin 30	9 - PIA IC pin 16
2 - " 10 " 31	10 - " 15
3 - " 11 " 32	11 - " 17
4 - " 13 " 33	12 - " 11
5 - " 14 " 37	13 - " 10 (1 meg N/C)
6 - " 15 " 38	14 - ANTIC pin 8
7 - " 16 " 39	15 - PIA IC pin 14
8 - " 17 " 40	16 - PIA 'HOLE' 17 (4 meg N/C)

N/C= No Connection; For 4 meg installation see 4 MEG INSTALLATION below.

5.To be able to select the internal basic, connect a toggle switch between ground and the motherboard where PB1 was removed (PIA 'HOLE' 11). The switch is not much different than the Option Key, and I found it more versatile.

6.Install the 8 DRAM's (1 or 4 meg x 1, 120NS min., CAS before RAS refresh).

7.Make sure that the meg board is not shorting to anything and turn the computer on. If installation was done properly the computer should come up in the same manner that it did before this installation was done. If not, correct the problem (see trouble shooting) and try again.

8.When putting the computer back together, use extreme caution to make sure that the meg board does not short out anything. If you used sockets, you may not be able to install the top RF shield. Don't force it.

Compatibility

This method of installation is compatible with Basic XE, the translator disk, and any other software that requires bit 0 to remain in its normal configuration. This method allows Antic control via bit 5. With this method, internal basic is lost via software control. This is probably the most compatible method, and the one that I use and recommend. This upgrade should be compatible with any software designed for the 130XE, or any XL/XE with expanded memory. The design of the software will determine how much of the expanded memory will be used.

\$D301 PIA PORT B BIT ASSIGNMENTS: 1 MEG INSTALLATION

BIT 0-O.S. ROM CONTROL, 1=ROM, 0=RAM	BIT 1-RAM BANK SELECT, 1=RAM, 0=RAM
BIT 2-RAM BANK SELECT, 1=RAM, 0=RAM	BIT 3-RAM BANK SELECT, 1=RAM, 0=RAM
BIT 4-CPU BANK ENABLE, 1=NOT ENABLED, 0=ENABLED	
BIT 5-ANTIC BANK ENABLE, 1=NOT ENABLED, 0=ENABLED / RAM BANK SELECT, 1=RAM, 0=RAM	
BIT 6-RAM BANK SELECT, 1=RAM, 0=RAM	BIT 7-RAM BANK SELECT, 1=RAM, 0=RAM

4 MEG INSTALLATION

This method is NOT compatible with Basic XE, the translator disk (see notes), or any other software that requires bits 0, and/or 1 to remain in its normal configuration. This method does not allow Antic control. If Antic addresses the banked memory area (\$4000-\$7FFF), it will see the banked memory currently there. With this method, internal basic is lost via software control. Access to the ram under the OS is also lost (see notes).

We are going to connect the lines that normally go to the enable bits to ground. This will mean that the 4 meg banked memory area is always active, so we are going lose the 16K bank of main memory, and replace it with 16K of the banked memory. This will cost you 16K of ramdisk for a total of 4080K available.

1.Remove PIA pin 10 from motherboard (see notes). Install the board following the above instructions. Note wires 13 & 16.

2.On the meg board, install jumper J1.

3.On the PIA, remove pins PB4 and PB5 (PIA pins 14 & 15) from the motherboard and bend them out. Be careful not to damage the motherboard or break the pins off.

2.Connect ground to the motherboard where PB4, and PB5 pins were. Connect a toggle, or momentary switch between PB7 (PIA pin 17) and 'HOLE' 17.

NOTE:This switch must be closed during power up (Atari and Omniview OS's) until you get a screen. It can be left off with OSNXL. If you want to use the internal diagnostics, or if you go into omnimon of the OSNXL, the switch must be on (closed). It must also be on while you go into 80 columns of omniview. Turn it off (open) all other times.

\$D301 PIA PORT B BIT ASSIGNMENTS (4 MEG)

All bits control ram, 256 banks of 16K each.

Notes

1. It is possible to maintain OS banking using 4 megs. It requires moving the OS into the ram before any banking of that bit occurs, but remember that when you manipulate bit 0 to low to bring the ram in under the OS, it will also change the bank at \$4000-\$7FFF, and vice versa. If you wish to do this, leave PIA pin 10 connected to the mother board and use 'MOVEOS' file on the disk appended to the autorun.sys file if you like. Moving the OS to ram shadows it so you won't lock up when bit 7 goes low.

2.As you noticed in note 1, these installation instructions cover what I believe to be the best installation method of the MEG upgrade. By no means does it cover all the methods of installation. Contact us if you have questions about other methods.

Helpful hints:

If you have read these instructions and do not understand them, then do not attempt this installation without assistance. For assistance, you may call Newell Industries between 9 and 5 CT. Collect calls will not be accepted.

Plan the routing of the jumper wires before you start. If you feel that you cannot do the installation yourself, and cannot find anyone locally to do it, Newell Industries will install the upgrade for \$40.00 (includes shipping).

TROUBLE SHOOTING

1.BLANK SCREEN

This could be caused by numerous things. Did you close the PB7 switch (4 meg)? Check wires 15 & 16 to proper locations on 1 meg. Check all ICs for bent pins. Check for shorts in soldering. Check motherboard where pins were removed.

2.MYDOS WILL NOT BOOT RAM DISK-ERROR MESSAGES DURING TEST RUN

Check solder connections for bad solder joints or shorts. Check AB0-AB6 to proper pins. Check REF to pin 8 of ANTIC. Check data lines 1-8 to proper locations, opens, or shorts.

3.UNKNOWN

The chances of your having a defective meg board are very small. THE MOST COMMON CAUSE FOR PROBLEMS ARE IMPROPER INSTALLATION. If you have double checked your installation and it still does not work, contact Newell Industries for further assistance.

WARRANTY

Newell Industries will repair or replace any defective part for a period of ninety days from date of purchase at no charge. This excludes parts that have been mishandled or unauthorized modified in any way.

If you have installed the meg upgrade in your computer and cannot get it to function properly, you may send your computer to Newell Industries and it will be repaired and returned

to you at no charge if it is determined that the upgrade parts are defective. If improper installation is the cause of the failure, Newell Industries will correct the installation and return the tested board to you COD for charges.

USING YOUR MEG BOARD

There is a simple BASIC program that checks one byte of each bank of memory to insure that they are working. It is on the disk furnished. The filename is "M1TEST1M.BAS". When this program is ran, it should come back with "TEST COMPLETE, 0 ERRORS". If you get any ERROR messages back, refer to the trouble shooting section. CAUTION, this program alters banked memory, and may have some undesirable affects if the ramdisk is not reinitialized.

MYDOS DISK OPERATING SYSTEM

The MYDOS disk operating system 4.50 M1 furnished with the meg upgrade is a patched version of 4.50. The patch was made to correct a problem in the ramdisk handler that would not allow the use of bits 0 and 1. Refer to the Mydos manual for setting up the various types of ramdisks available. The MYDOS manual is in .ARC files on the disk along with the unarc program. Move the files to the ramdisk to unarc them. The page sequence table in mydos starts at \$0BBA and is high nibble C,A,8,6,4,2,0,E by low nibble 1,3,5,7,9,B,D,F as shipped with this upgrade configured for method 1 installation.

M1COPY SECTOR COPIER

This program was designed to be used with the general installation of the meg upgrade. It should not be used with any other computer unless it is verified that it uses the same bank switching methods. The program resides at \$8500, once loaded may be reran using the M option of DOS to run at \$8500 (assuming it has not be overwritten by another program).

The ramdisk page sequence of the MYDOS with the upgrade is such that the copy program may be ran and copy as many disk as you like and return to DOS without loosing the RD directory including DUP.SYS and MEM.SAV. The ramdisk will not even know that part of it was used. Of course, if the ramdisk is full, you will loose the files in the last portion depending on the size of disk you copy. The page sequence for m1copy is high nibble 0,2,4,6,8,A,C,E by low nibble 1,3,5,7,9,B,D,F. Copying a 720K disk will only go up to the A7 bank thus leaving the normal 130XE banks and the dos lower ramdisk banks alone.

Use the 'L' command from DOS to load M1COPY. If you are going to copy 80 track or double sided diskettes, your disk drives must be configured prior to running the program. The program can be loaded from the ramdisk if you need to configure your drives. M1copy uses ONLY the banked memory area for copying, so nothing special is required.

The first prompt. HOW MANY COPIES?

Enter how many copies you want (1-99) and, if needed, the special characters to pass information to the program.

SPECIAL CHARACTERS

A "D" entered after the number of copies (exp. 25D) indicates that the diskette you are going to copy is a double density diskette.

A "Q" indicates that you want to copy 1440 sectors per diskette. (exp. 25DQ) This could be a 40 track double sided, 80 track single sided, or 80 track double sided diskette that you only want to copy the first 1440 sectors. Remember that the format option will format the new diskette to the configuration of the drive.

An "O" indicates that the diskette you are going to copy has 2880 sectors. (exp. 25DO) This would be an 80 track double sided diskette.

An "H" indicates that you just want to copy the first portion of the diskette, including the directory (369 sectors). (exp. 25H) This example would copy the first 369 sectors of any single density diskette.

NOTE: The last character entered will be the one used by the program. (exp. 1DHQ translates to 1DQ, 99QOHD translates to 99HD) A "Return" without a specified number of copies will be interpreted as 153. (exp. H translates to 153H) "Return" must be after entry. (exp. 1H"Return")

SOURCE DRIVE?

Enter the drive number where you will put the diskette to be copied. (1-4) Do not press "Return". Drive density is automatically set on source disk.

DESTINATION DRIVE?

Enter the drive number that you will use to write the copies to. (1-4) Do not press "Return". Drive density must match source diskette. Using the same drive for source and destination will insure that the density matches.

VERIFY WRITES (Y OR N)

Press "Y" if you want to write with verify. This takes about 3 times longer to copy a diskette and is normally not used unless you have some very important diskettes to back up.

FORMAT (Y or N)?

Press "Y" if you want the destination diskette formatted automatically with every copy. Otherwise press "N". Do not press "Return".

INSERT SOURCE DISK, PUSH START

Follow this prompt to read your source diskette.

INSERT DESTINATION DISK, PUSH START

Follow this prompt to write your copies.

UNREADABLE SECTORS

If unreadable sectors are encountered, after a few tries, the program will continue to the next sector, using whatever data it got from the bad sector to write to the destination disk, until the end sector is reached. This program is not intended to copy copy protected diskettes. Be aware that it is illegal to copy copyrighted software for any purpose other than backup.

MEG130 4 MEG MOD

